

# Technical Instruction Sheet SHERPASCOPIC 2272/250 – 2272/253

Product compliant with the NF P 93-352 standard of 12 November 2016:

	3 to 4 steps	0,78 --> 1,02	1,39 --> 1,57	1,30 --> 1,63	23,1	2,03 x 0,66 x 0,38	Max.: 150
	4 to 6 steps	1,07 --> 1,53	1,61 --> 1,97	1,35 --> 2,11	26,4	2,30 x 0,66 x 0,32	
	7 to 9 steps	1,76 --> 2,23	2,15 --> 2,52	2,05 --> 2,76	31	3,20 x 0,66 x 0,38	
	7 to 10 steps	1,76 --> 2,46	2,15 --> 2,72	2,05 --> 3,16	33	3,20 x 0,66 x 0,38	



## 1. Product description

This Individual Wheeled Platform (IWP) is used for second-fix and fitting work. The platform is used by a single operator standing on the flat working surface. The platform is equipped with two fixed wheels for moving the platform around.

The platform is equipped with two independent adjustable stabilisers on all models. The stabilisers ensure that the product will remain stable under the normal usage conditions recommended by the standard in force.

## 2. Use

### 2.1. Installation

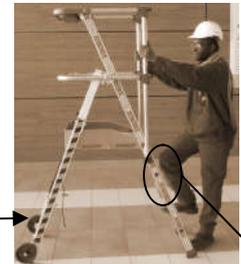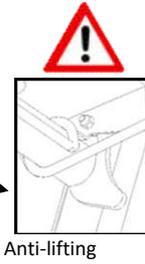

Fit the wheels in line with instruction 61029/280 in the nuts & bolts box

Open the platform by lowering the working surface. The platform must rest flat on the steps.


Unfold the guardrail. Once in position, the locking pins stop the guardrail from folding.



**THE STABILISER CAM MUST BE LOCKED**



The stabiliser is fitted by unlocking the cam. The stabiliser is in place once it is in contact with the ground. Then lock the cam to use the product.

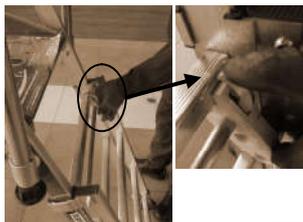

Open the lock


Put the pivot lock in the open position  
Pull the rung to hold the product

Slide the steps to the desired rung

The hook must be locked

# Technical Instruction Sheet SHERPASCOPIE 2272/250 – 2272/253

## 2.2. Access

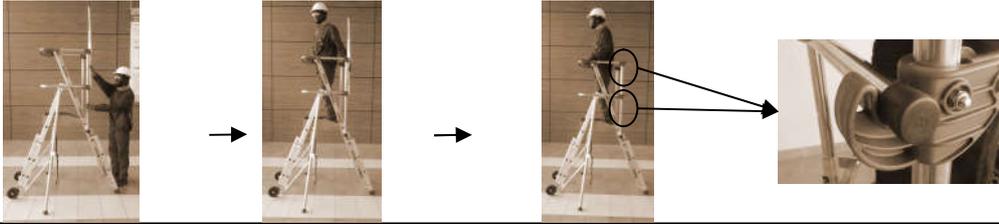


CLIP THE GATE INTO ITS RECEPTACLE.

Open the gate to access the working surface. Once on the working surface, close the gate to properly use the product.

## 2.3. Moving



Movement when unfolded

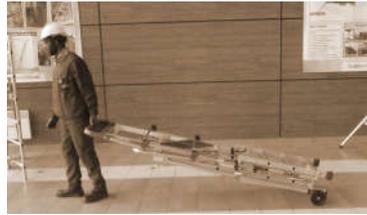

Movement when folded


## 2.4 Working positions



## 2.5. Closing:

Proceed in reverse order from when setting up the product.

## 2.6. Hoisting the product

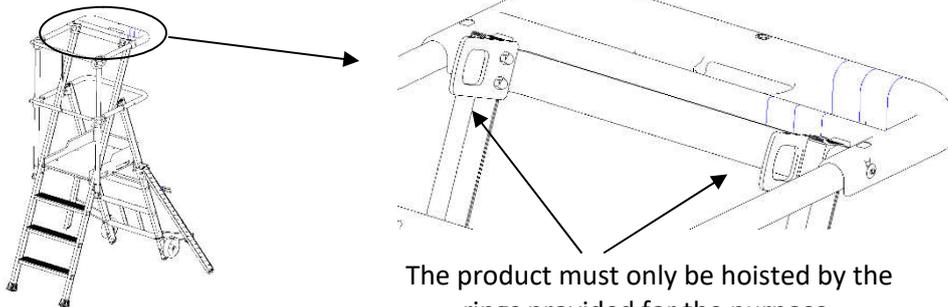

The product must only be hoisted by the rings provided for the purpose.

## 3. Tip for use:

- + Do not use the platform without its guardrails or behind a door that is not locked.
- + Any surface that the platform is located on must be horizontal and not slippery.
- + All of the platform feet must rest on the ground.
- + On soft terrain always place a plate under all of the affected feet.
- + Always make sure that the working area is away from any bare electric conductor that is powered up.
- + The platform must not be thrown or handled roughly in use.
- + Always climb on and off facing the platform
- + Be sure to wear shoes that offer a safe footing.
- + Do not climb onto the platform if you suffer from fear of heights or are tired.
- + Do not use the platform without fitting the stabilisers.
- + Do not use the platform to carry objects.

## 4. Maintenance:

- + Always check the general condition of the platform prior to use (condition of parts and their geometry).
- If parts require replacing, only use TUBESCA-COMABI components. Please refer to the manufacturer's service sheet <https://www.tubesca-comabi.com/fr/centre-de-documentation> section After-sales service exploded views.
- + After work, always clean the platform with a clean cloth.
  - + The platform must be inspected periodically and the results of these checks must be recorded.